

**To view current cycle and remaining time, press any button.**


Press to manually open valve

Press to read open time  
\* See Note

Press to read: Plunger Arrivals, Plunger Failures, and Battery Voltage. To clear the counts, while holding button, press the up or down buttons

Press to read time to keep valve open after plunger arrival  
\* See Note

Press this button to view the options one at a time. To change an option's status, press the up or down buttons while viewing that particular option. For a list of options, and what they do, see the table below. All options are factory set at EDI for normal time cycling.

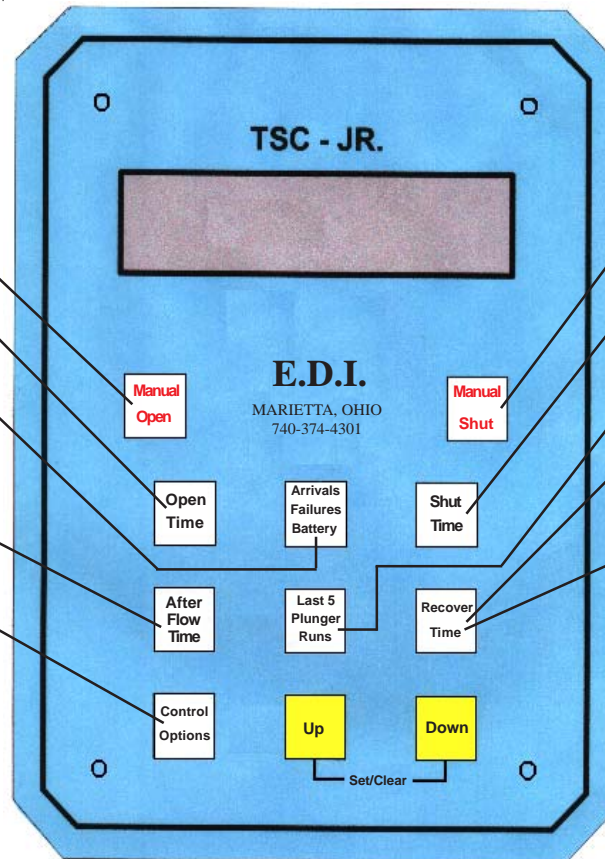

Press to manually shut valve

Press to read shut time  
\* See Note

Press to read the last 5 plunger travel times

Press to read time to keep valve shut after plunger failure  
\* See Note

When option #2 is in altered position (see control options), press twice to read fall time.

\* NOTE: To alter a time, press the up or down keys while holding the appropriate time button.

Option #1 - When changed, time cycling will stop if no MSO has been detected while in the open time. The operator will be warned with a "Loaded" message

Option #2 - When changed, fall time appears after pushing recovery time button twice. This time overrides external open connection.

Option #3 - When changed, the controller stops timing at the end of shut time until an external open connection is made.

Option #4 - When changed, the controller will operate in sequential time.

Option #5 - When changed, times can be set in seconds.